## Tandy VGA Adapter (250-4043) Troubleshooting Faxback Doc. # 2134

Symptom	Solution
1 long beep and 2 short beeps when you turn on the system.	* The VGA adapter is not properly seated in the expansion slot is dirty. Reseat the VGA adapter, or clean the connectors with a clean pencil eraser.
No display	<ul> <li>* The monitor and/or power cable is not properly plugged in.</li> <li>* The monitor is not turned on.</li> <li>* The brightness and/or contrast control on the monitor is not turned up far enough.</li> </ul>
F1 SETUP error when you start up the system.	* The Setup utility was not run. See the installation instructions supplied with your computer.
Distorted images or a blank screen when you run your software.	<ul> <li>* The software is not configured or compatible with the VGA graphics adapter's current video configuration. Run VGA.EXE.</li> <li>* Be sure that your monitor was turned on prior to starting your computer system. Your VGA adapter card may recognize some color monitors as monochrome when they are turned off during the startup process. This will cause the VGA card to operate in monochrome modes and your software might be configured for color operation. Use the VGA.EXE utility to change to color mapping mode as needed.</li> </ul>

(jej-05/11/94)