


The 5 adjustment knobs are located below the video screen on the left side behind the control panel. The panel door opens from the left side and swings down to reveal the controls.

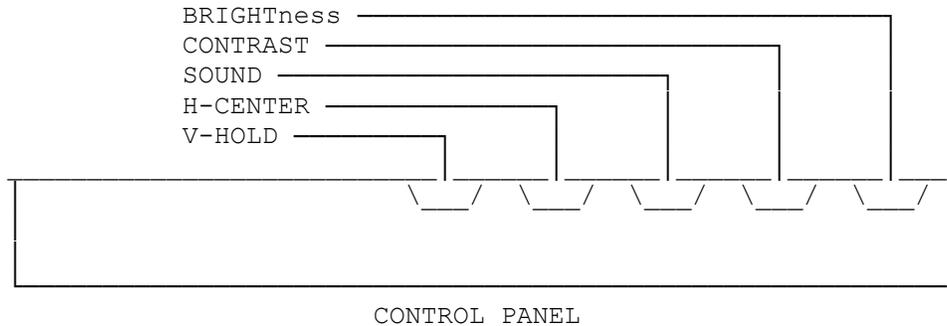

#### V-HOLD

This control stabilizes the display on the screen. Rotate the knob fully counterclockwise and then slowly clockwise until the display is stable.

#### SOUND

This control adjusts the sound volume. The volume increases as this knob is turned clockwise and decreases as it is turned counterclockwise.

#### H-CENTER

This control sets horizontal position. Rotate the knob to center the display.

#### CONTRAST and BRIGHTness

Adjust the screen brightness to compensate for room lighting.

- \* If a room is dark rotate either or both of these controls counterclockwise until the picture is easily visible.
- \* If the room is bright rotate either or both of these controls clockwise until the picture is easily visible.
- \* The CONTRAST control also adjusts separation of low and high intensity characters -- low or high as required.

(dte-07/27/93)