
Contents

License Agreement for Machine Code	iii
Statement of Limited Warranty	iv
About This Book	xiii
Related Publications	xiii

Part 1. 7588 Industrial Computer

Chapter 1. Overview of the 7588 Industrial Computer	1-1
General Layout of Components	1-3
Specifications	1-5
Power Supply	1-5
Heat Output	1-5
Environment	1-5
Agency and Standards Compliance	1-6
Chapter 2. Installing Your System Unit	2-1
Before You Begin	2-1
Task 1. Unpack Your System Unit	2-1
Task 2. Check the Voltage Range	2-1
Task 3. Install Internal Options	2-2
Task 4. Secure the System Unit	2-2
Task 5. Connect the Cables	2-2
Task 6. Configure the System Unit	2-3
Task 7. Perform the Check-Out Procedure	2-3
Task 8. Finish the Installation	2-4
Chapter 3. Installing Options	3-1
Turning Off the Power and Disconnecting Cables	3-1
Removing the Cover	3-2
Installing SBC Options	3-3
Installing Memory	3-4
Installing Cache Memory	3-6
Installing a PMC Card	3-7
Reinstalling the SBC	3-7
Installing Adapters	3-8
Installing the Card Hold-Down Spacers	3-9
Installing an Internal Hard Drive	3-11
Installing the Mounting Options	3-12
Installing the Rack-Mount Option	3-13
Installing the Floor-Stand Option	3-14
Installing the Panel-Mount Option	3-15
Chapter 4. Operating and Configuring Your System Unit	4-1
Operator Information	4-1
Cleaning Air Filters	4-2
Starting Up Your System	4-2
Installing Application Programs	4-3
Security Features	4-3

Startup-Sequence Control	4-4
Keyboardless Operation Mode	4-4
Configuration Information	4-5
Using the Configuration/Setup Utility Program	4-6
Device Drivers	4-22
Interrupt and DMA Assignments	4-23
Jumpers and Switches	4-24
Memory-Retention Battery	4-24
Serial Port	4-25
Parallel Port	4-26
Universal Serial Bus	4-28
Watchdog Timer and Thermal Monitor	4-29
SVGA Video	4-29
System Programs	4-31
Chapter 5. Solving Problems	5-1
Diagnostic Tools	5-1
Testing the System Unit	5-2
Starting the Computer	5-2
Starting the Diskette-Based Diagnostic Program	5-3
Troubleshooting Charts	5-4
Error Messages	5-9
POST Messages	5-10
Diagnostic Messages	5-13

Part 2. Technical Descriptions

Chapter 6. Single Board Computer	6-1
586 and 586E SBC Component Layout	6-2
586U and 586EU SBC Component Layout	6-3
Memory Subsystem	6-4
Indicators	6-4
I/O Connectors	6-6
Miscellaneous Connectors	6-13
Jumpers and Switches	6-15
Configuration Switch	6-16
Chapter 7. Analog Video PMC Form Factor Card	7-1

Part 3. Hardware Maintenance and Service

Chapter 8. Service Information	8-1
Configuration/Setup Utility Program	8-1
Downloading System Support Programs and BIOS Updates	8-2
Vital Product Data	8-2
Flash (BIOS/VPD) Update Procedure	8-2
Diagnostic and Test Tools	8-3
Power-On Self-Test (POST)	8-3
Error Messages	8-4
QAPLus/PRO Diagnostic Program	8-5
General Checkout	8-10
Keyboard	8-12

USB Ports	8-14
Printer	8-16
Power Supply	8-17
Backplane Power-Supply Connections	8-18
Display	8-19
Symptom-to-FRU Index	8-20
Beep Symptoms	8-21
No Beeps	8-22
Numeric Error Codes	8-23
Error Messages	8-27
Miscellaneous Symptoms	8-32
Hard Disk Drive Boot Error	8-34
Undetermined Problem	8-34
Removal and Replacement Procedures	8-35
Removing Power and Disconnecting Cables	8-35
Removing the System Unit Cover	8-36
Removing and Replacing Adapters	8-37
Removing and Replacing a Diskette or CD-ROM Drive	8-38
Removing and Replacing a Hard Disk Drive	8-39
Removing and Replacing the Power Supply	8-39
Removing and Replacing a Front Fan	8-40
Removing and Replacing the LED Assembly	8-41
Removing and Replacing the Power Switch	8-41
Removing and Replacing the IBM SBC	8-42
Replacing the Processor	8-44
Replacing a Video PMC Card or Keyboard/Mouse Cable	8-47
Removing and Replacing the Backplane	8-48
 Chapter 9. Parts Catalog	 9-1
IBM Service Parts Warranty	9-1
Electrical and Electronic	9-2
Removable Media Drives	9-4
Fans and Filters	9-6
Hard Disk Drives and Covers	9-7
Rack-Mount, Floor-Stand, and Panel-Mount Kits	9-8
Cables	9-9
Mouse	9-9
Keyboards	9-9
Power Cords	9-10

Part 4. Appendixes

Appendix A. System Records	A-1
Appendix B. Physical Dimensions	B-1
Appendix C. Jumpers, Switches, and Pin Assignments	C-1
Hard Disk Drive Jumper Settings	C-2
Backplane Connectors	C-4
SBC Connectors	C-6
SBC Settings	C-7
Serial Port Pin Assignments	C-9

Appendix D. Interrupt and DMA Assignments	D-1
Interrupt Request Assignments	D-1
DMA Channel Assignments	D-2
 Appendix E. S3 Trio64V+ Super VGA Driver Installation	E-1
Default Resolutions	E-1
Operating Systems	E-1
Selecting a Monitor Using the Configuration/Setup Utility Program	E-2
Installing Windows 3.1 Video Drivers	E-2
Alternative Method for Changing Resolutions	E-3
Updating the Windows 3.1 Video Driver	E-3
Installing Windows 95 Video Drivers	E-4
Alternative Method for Changing Resolutions	E-4
Installing Windows NT Video Drivers	E-5
Installing OS/2 and OS/2 Warp Video Drivers	E-5
Installing Video Drivers for CAD Panacea	E-6
Installing Video Drivers for MicroStation PC	E-7
 Appendix F. Notices	F-1
Trademarks and Service Marks	F-1
Required Electronic Emission and Connectivity Notices	F-2
Class A Federal Communications Commission Statement	F-2
Industry Canada Compliance Statement	F-2
United Kingdom	F-2
European Union (EU) Electromagnetic Compatibility Directive	F-2
Germany	F-3
Japan	F-4
Korea	F-4
Taiwan	F-4
Safety Notices (Multi-Lingual Translations)	F-5
Safety Information	F-11
General Safety	F-11
Electrical Safety	F-12
Safety Inspection Guide	F-15
Handling Electrostatic-Discharge-Sensitive Devices	F-16
Grounding Requirements	F-16
Laser Compliance Statement	F-16
German Power Switch Statement	F-17
Power Cord Notice	F-17
 Index	X-1